

FIRESIDE **manor**

'Zodiac'
Indoor Heater



INSTRUCTION MANUAL

**Please read all instructions carefully
and retain for future reference.**

SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following;

- If the appliance is damaged, check with the supplier before installation and operation. In the event of a fault unplug the heater.
- Check that the voltage indicated on the data plate corresponds with that of the available supply before connecting the appliance to the mains power supply.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Close supervision is required when using this appliance near children.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not operate this appliance with a damaged plug or cord, after being dropped or damaged in any way.
- Do not use this appliance for anything other than its intended use.
- This appliance generates heat when in use; to avoid the risk of burns, do not touch the hot parts.
- Ensure combustible materials e.g. Furniture, pillows, curtains, clothes etc. are at least 1 metre away from the heater. To avoid overheating of the appliance, do not cover. We do not recommend use of this appliance on deep pile carpets or on long hair rugs.
- This appliance is not intended for use outdoors, in bathrooms, laundry areas or similar indoor locations where water or high levels of moisture are present. Never position the heater where it could fall into water. Do not run the power supply cord under carpeting, rugs or other similar coverings.
- Do not insert foreign objects into the ventilation or exhaust openings as this may cause electric shock or fire.
- Do not use this appliance close to gasoline or other flammable liquids.
- Disconnect the appliance from the mains power supply before replacing the bulbs.
- Never operate the appliance on a programme switch, timer switch or any other automatic operational product. Do not operate this appliance through an external switching device, such as a timer.
- Disconnect the heater immediately if it malfunctions and contact your nearest service technician.
- Unplug the appliance if it will not be in use for long periods.
- **WARNING** – In order to avoid overheating do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- **CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present

 
INSTALLATION

- These appliances are designed to be free standing and are normally positioned against a wall.
- Open the packaging, the product is well packaged for freight, and such remove the appliance carefully.
- Retain the packaging for possible future use, in the event of moving or returning the stove to the supplier.
- Ensure that there is a grounded mains power supply socket close to the desired position of the heater.
- Never use an extension lead.
- The mains cable must remain at the back of the heater and must not be in contact with any hot elements.

OPERATION


Caution: This heater shall free from noticeable vibration when it is operating, this could cause the bulb break down. Please turn the heater off firstly before movement, maintenance or cleaning.

The fan heater has two functions. One is to simulate the fire flame and the second is to operate as a fan heater. The control panel is at the behind of the stove door.

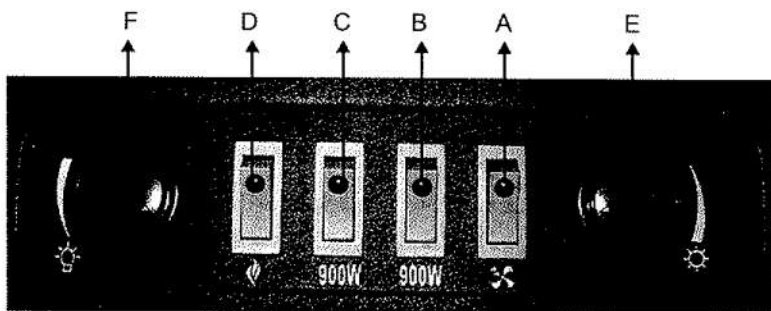

The first switch from the right(A) turns the fan on without the heating function. The second switch from the right(B) turns the heater on at 900 watts. The third switch (C) turns the heater on at 900 watts and the fourth switch (D) turns the fire flame simulation effect on. The dial on the right (E) is the thermostat control which automatically turns the heater on and off to maintain a constant temperature. Turn the dial clockwise to increase the desired temperature and anti clockwise to decrease. The dial on the left (F) adjusts the fire effect intensity, turn to achieve the desired effect.

 INSTRUCTIONS FOR USE

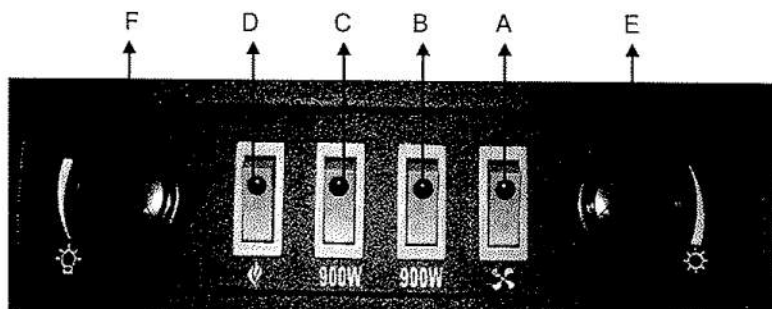

1. Plug the appliance into the mains power supply and switch 'On' if switchable.
2. The control panel is at the behind of the stove door.
3. Turn On switch A to start the fan.
4. For low level heating, turn on switch B.
5. For full heating turn on switches B and C.
6. To adjust the temperature, turn the temperature adjust dial E.
7. To add a flame effect, turn on switch D.
8. To adjust the flame effect, turn the dimming dial F.

Changing the Bulbs

1. **Always ensure that the appliance is disconnected from the mains supply.**
2. This appliance is supplied with two 25 watt G9 halogen bulb. When they require replacing, remove the two screws at two ends of log effect and remove the two metal brackets. Pull the log effect towards you and lift upwards
3. CAUTION: There may be sharp edges.
4. Always replace the bulbs with identical ones with the same wattage.
5. For assembly, proceed in the reverse order.

Thermostat Instructions

 
The sensitive hot air control (thermostat) will constantly maintain a pre-programmed temperature due to its automatic operation. Firstly, turn the Temp Adjustment Dial switch to the right towards the maximum level. Leave the switch in this position until the room reaches its desired temperature.

CONNECTION TO THE MAINS SUPPLY

Please check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a 13A plug complying to BS 1363. If this plug is unsuitable or needs to be replaced, please note the following:

IMPORTANT:

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

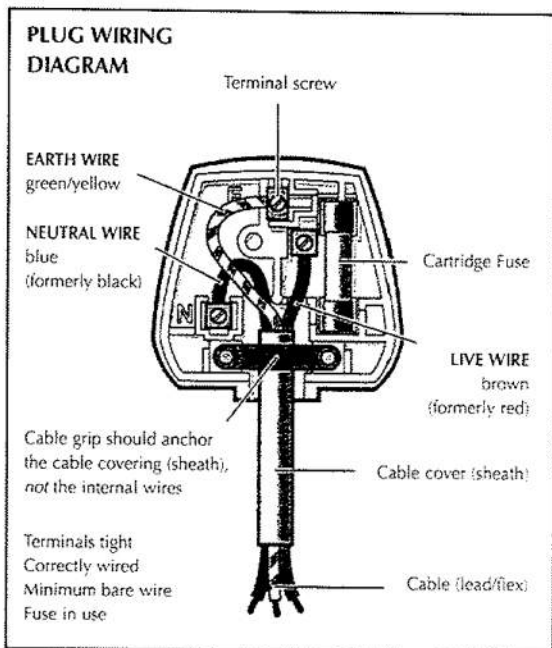

On no account must either the **BROWN** or **BLUE** wire be connected to the **EARTH** terminal. Always ensure that the cord grip is fastened correctly. If a 13A fused plug is used it must be fitted with a 13A fuse conforming to BS 1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIRABLE MAINS PLUG

If your appliance is supplied with a non-rewirable plug fitted to the mains lead, you will find that it incorporates a fuse, the value of which is indicated on the case of the plug or the fuse carrier. Should the fuse need replacing you must use an ASTA approved one (conforming to BS 1362 of the same rating). If the fuse cover is lost, the plug must not be used until a replacement is obtained from an electrical supplier. (If you need to remove the plug - **DISCONNECT FROM THE MAINS** and then cut from the mains lead and immediately dispose of it). Never attempt to re-use the plug or insert it into a socket outlet as there is a risk of an electric shock.

CLEANING

- **Always ensure that the appliance is disconnected from the mains supply.**
- Use a soft, clean duster to clean the exterior of the appliance.
- Do not use cleaning chemicals, glass cleaner or abrasive polishing products.

Manor Reproductions Ltd

Unit C, Hanbury Road, Stoke Prior, Bromsgrove,
Worcestershire, B60 4AE.

Please retain your receipt as proof of purchase.

If you wish to return this product **please return it to the retailer** from where it was purchased (subject to their terms and conditions). **Please do not return the goods to Manor Reproductions as we are unable to issue refunds.**

For Retailer information only:

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 01527 578484
Email: info@firesideaccessories.com
Fax: 01527 578585

Please have your delivery note / invoice to hand as details from it will be required.

GUARANTEE

- This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.
- This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.
- Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.
- In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.
- Consumables are not guaranteed i.e plug ,fuse and bulbs.
- Please retain instructions for future reference.